





Thames & Kosmos

REMOTE-CONTROL MACHINES

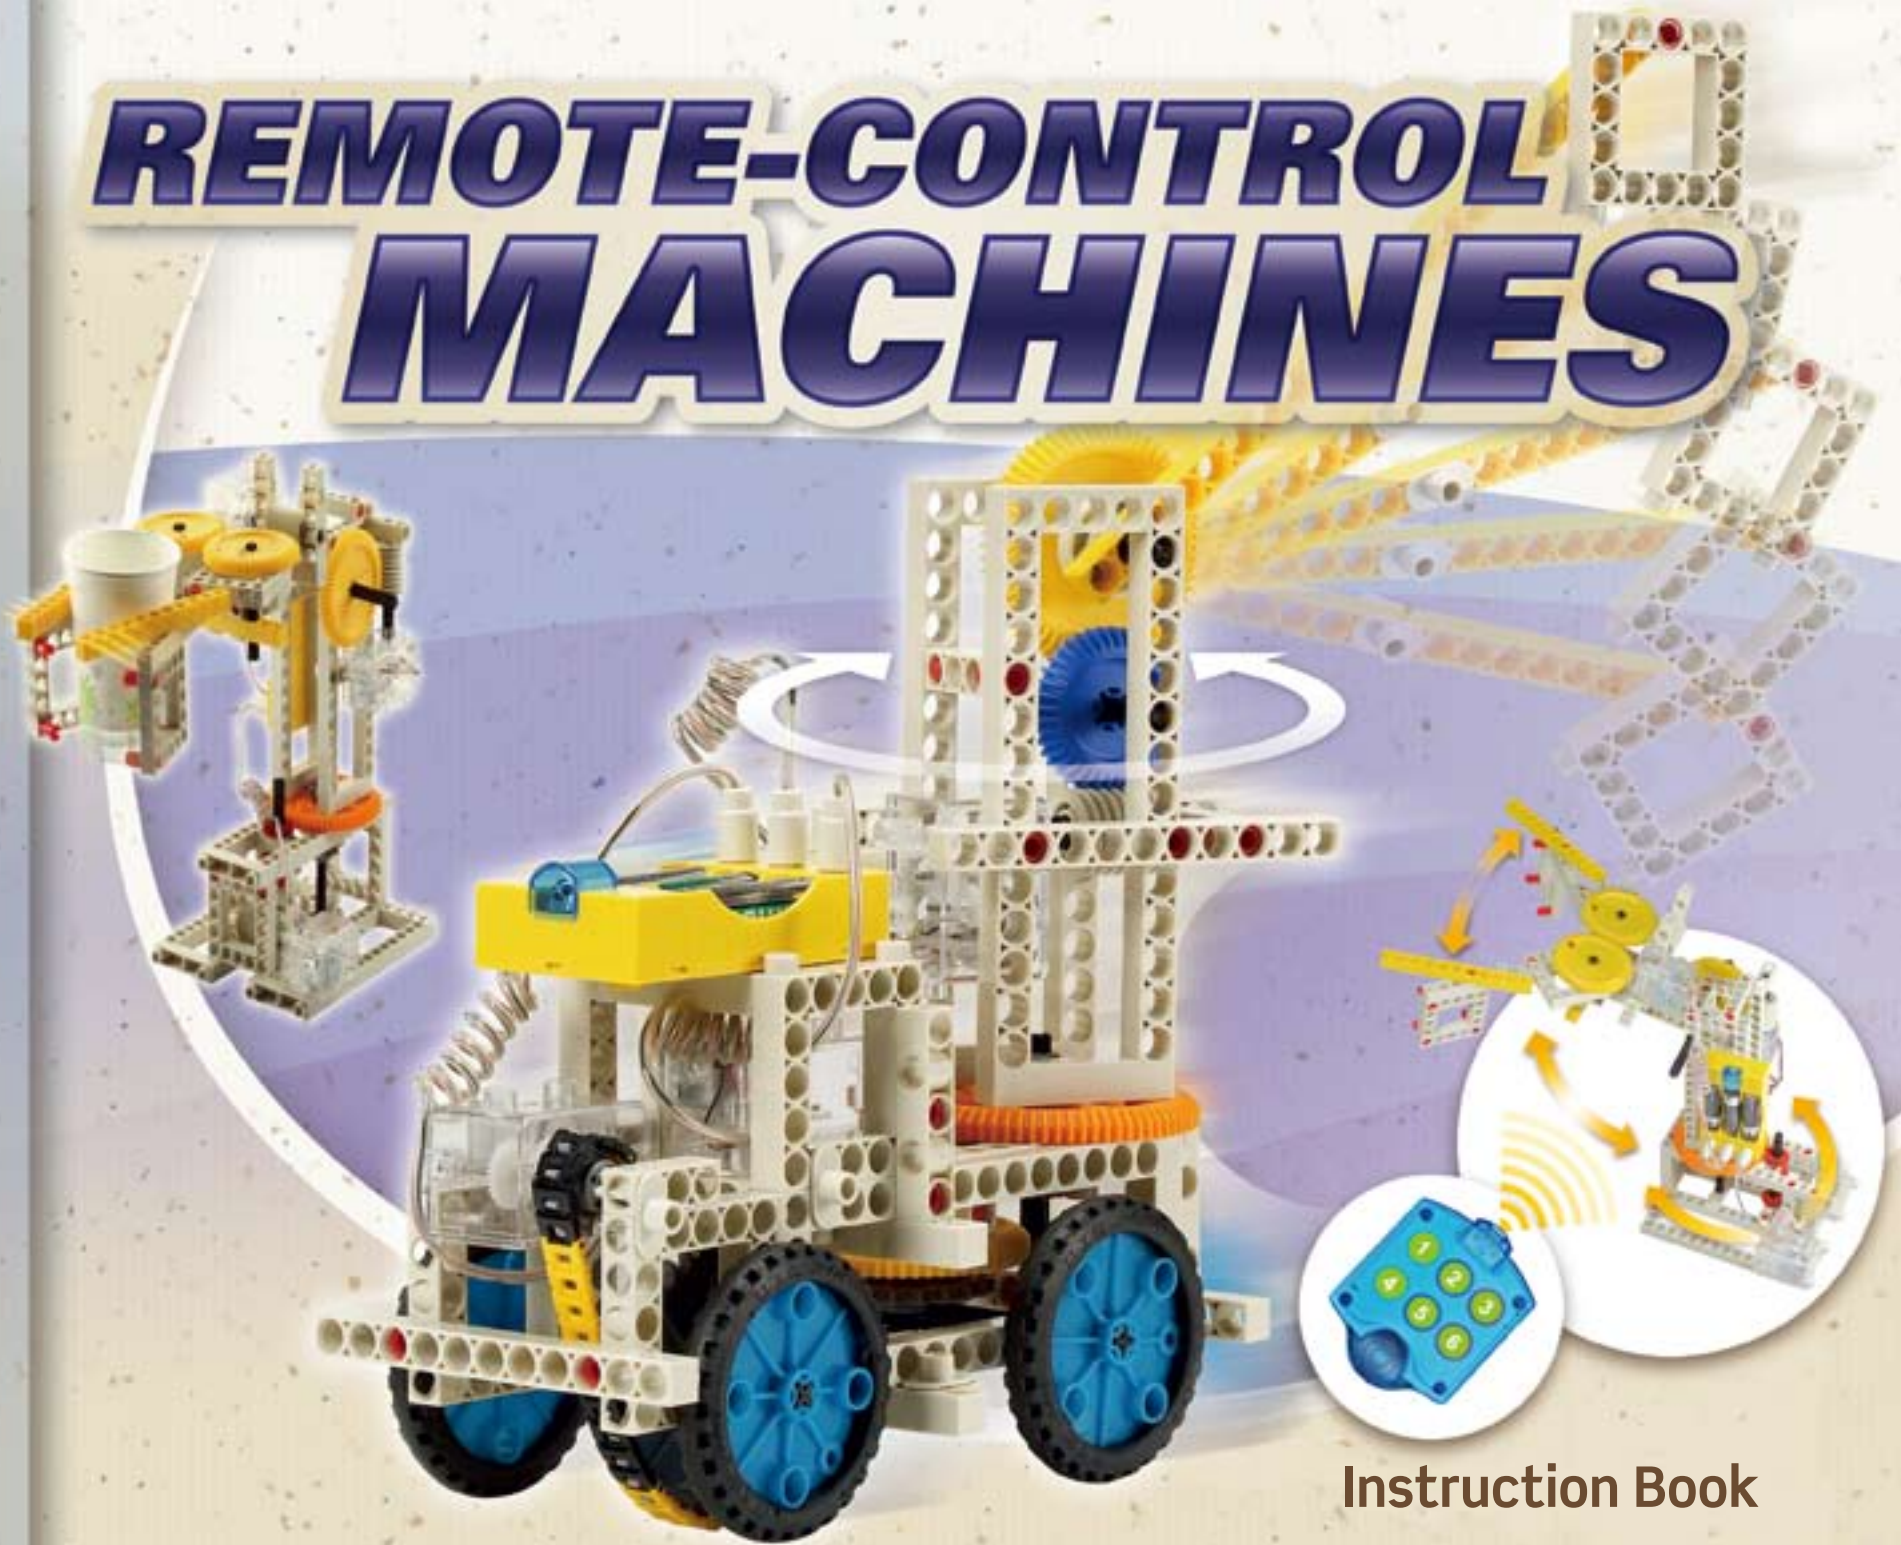

Instruction Book

Parts List | REMOTE-CONTROL MACHINES

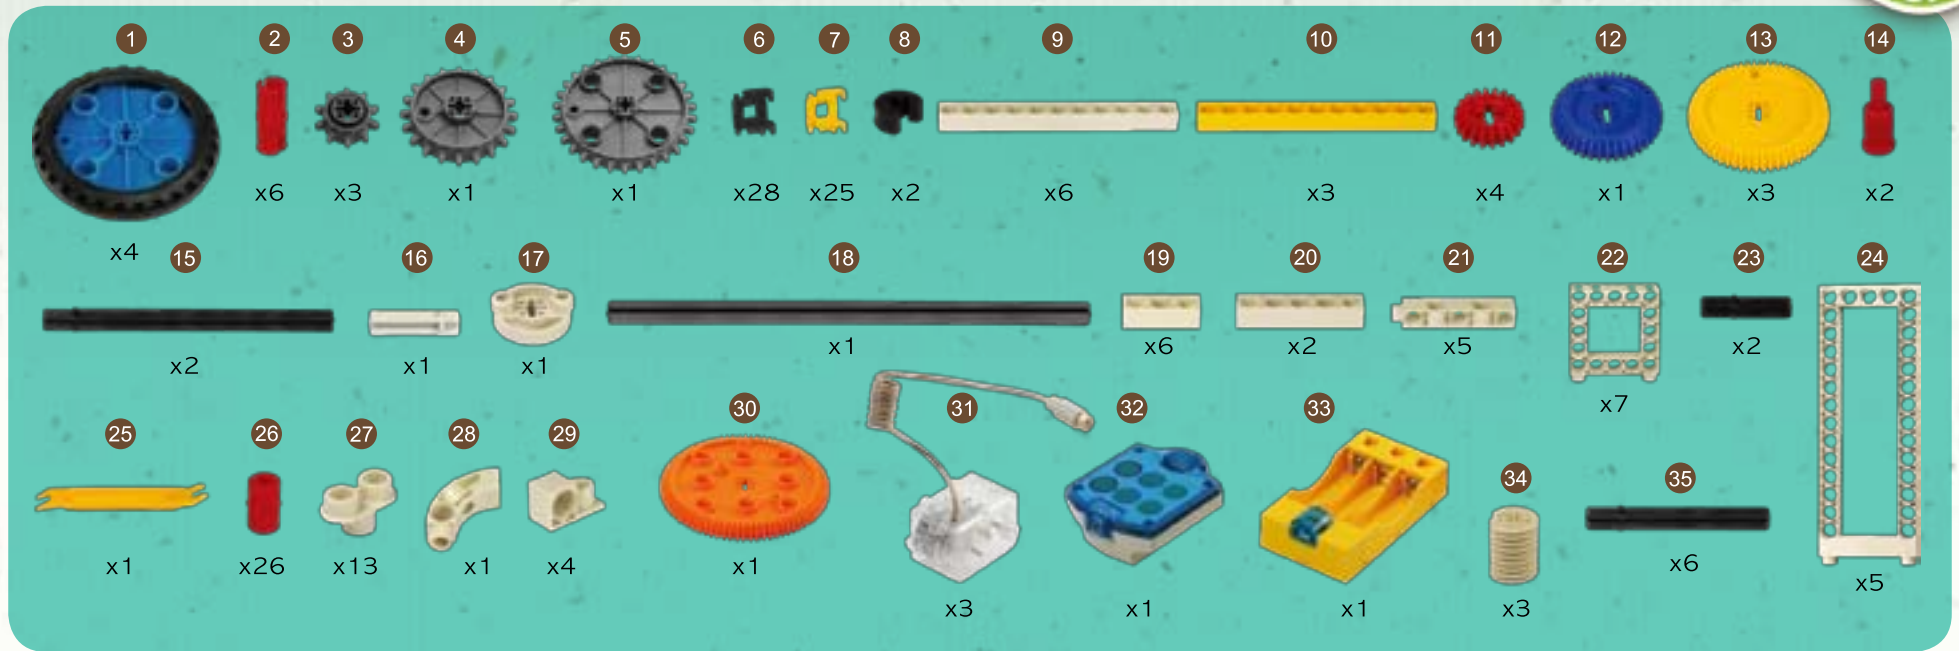

NO	PARTS NAME	PCS
1	WHEEL AND TIRE	4
2	JOINT PIN	6
3	SMALL SPROCKET	3
4	MEDIUM SPROCKET	1
5	LARGE SPROCKET	1
6	CHAIN UNIT (BLACK)	28
7	CHAIN UNIT (YELLOW)	25
8	AXLE LOCK	2
9	11-HOLE ROD (GRAY)	6
10	11-HOLE ROD (YELLOW)	3
11	SMALL GEAR (20T)	4
12	MEDIUM GEAR (40T)	1
13	LARGE GEAR (60T)	3

NO	PARTS NAME	PCS
14	SHAFT PIN	2
15	LONG AXLE	2
16	MOTOR AXLE	1
17	ROD CONNECTOR	1
18	EXTRA LONG AXLE	1
19	3-HOLE ROD	6
20	5-HOLE ROD	2
21	3-HOLE DUAL ROD	5
22	SQUARE FRAME	7
23	SHORT AXLE	2
24	LONG FRAME	5
25	PART SEPARATOR TOOL	1
26	ANCHOR PIN	26

NO	PARTS NAME	PCS
27	TWO-TO-ONE CONVERTER	13
28	CURVED ELBOW ROD	1
29	90 DEGREE CONVERTER - LEFT	4
30	80T GEAR	1
31	GEARED MOTOR WITH WIRE CONNECTOR	3
32	REMOTE CONTROLLER	1
33	RECEIVER/BATTERY HOLDER	1
34	WORM GEAR II	3
35	MEDIUM AXLE	6
36	DIE-CUT CARDBOARD PIECES	1
TOTAL		182






REMOTE-CONTROL MACHINES | Model 3 Crane




Size (cm) : 23 (L) x 12 (W) x 46 (H)

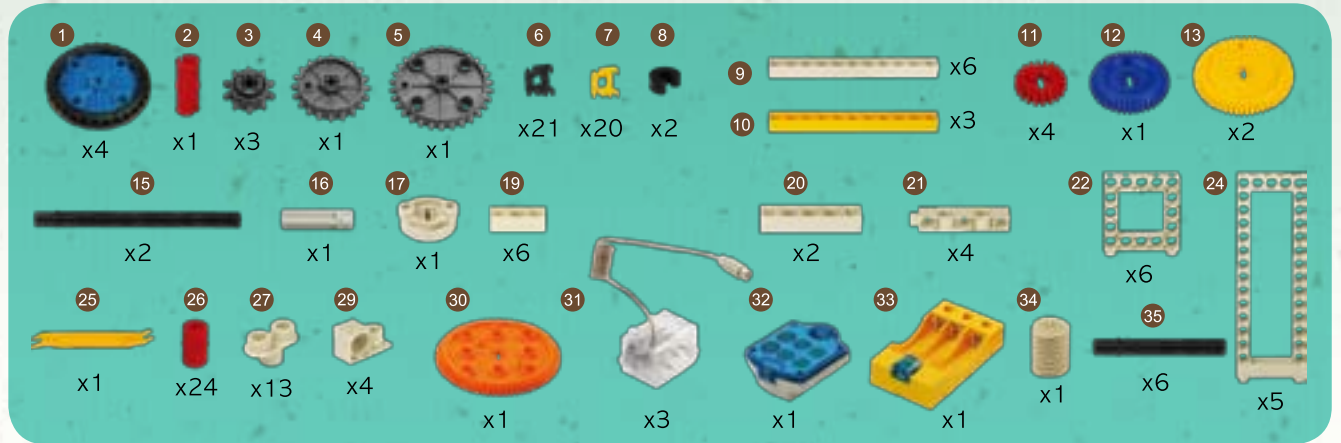



Tips for Assembly :

- Press the gear A downward and gear B upward to hold the 80T Gear in place.
- The wheels and the drive chain must be kept 1 mm away from the frame so they can turn smoothly.
- Use the end of the part separator tool marked with "A" to pry up the anchor pin.
- If the motor doesn't work, check to make sure the wire connector of the motor and the output of the receiver/battery holder are well connected, or that the batteries are not dead.

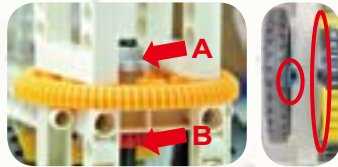

How to Operate :

1. Turn on the switch on the remote controller.
2. Touch the touch pad 2 or 5 on the remote controller to lower down or lift up the long crane arm.
3. Touch the touch pad 3 or 6 to turn the 80T gear clockwise or counterclockwise. Don't turn it more than 270 degrees or the wire will get twisted up.
4. Touch the touch pad 1 or 4 to drive the crane forward or backward.

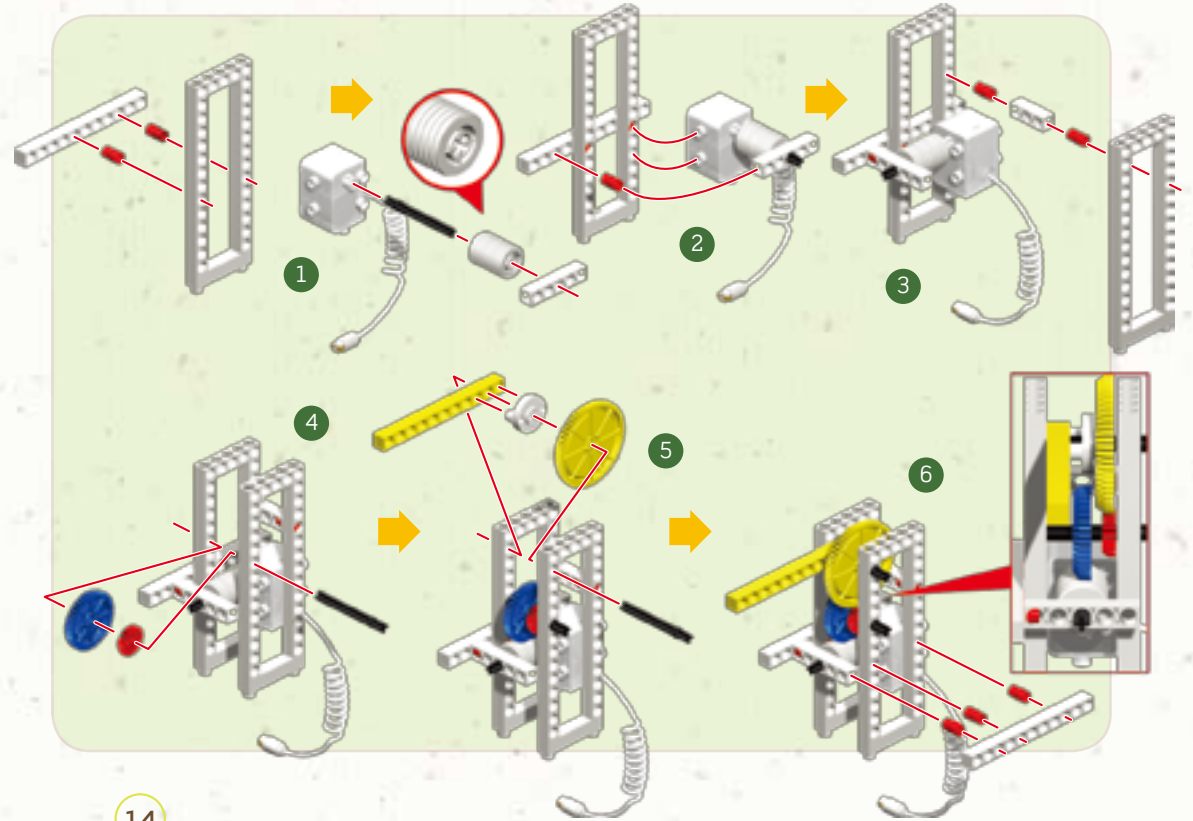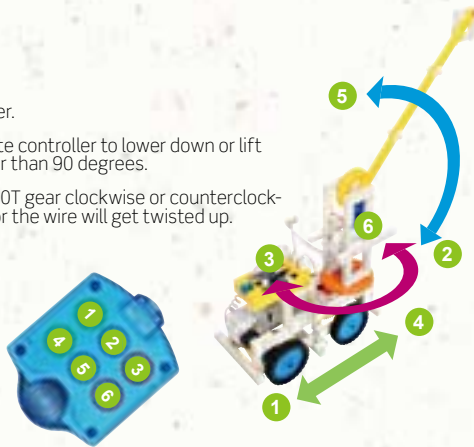

Model 3 Crane | REMOTE-CONTROL MACHINES

